


B28 PARTS LIST

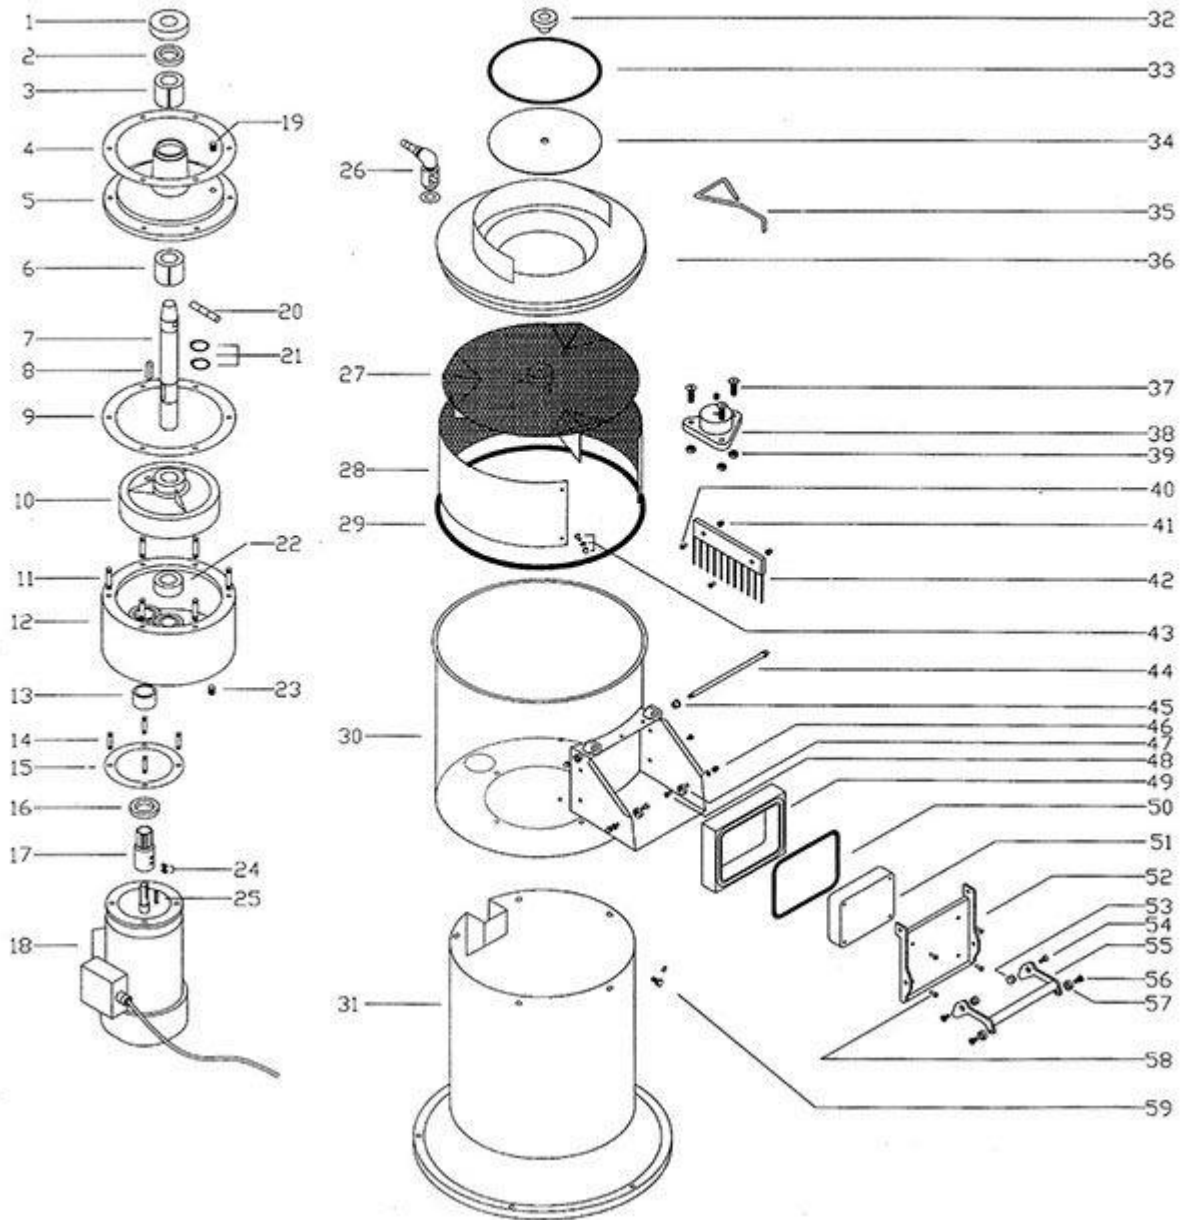

Bold B28 Parts List

No.	Description
1	Bold B28 - Cowl
2	Bold B28 - Oil Seal
3	Bold B28 - Top Bearing
4	Bold B28 - Gearbox Gasket
5	Bold B28 - Gearbox (Top)
6	Bold B28 - Bearing (Bottom)
7	Bold B28 - Drive Shaft
8	Bold B28 - Woodruff Key
9	Bold B28 - Gearbox Gasket
10	Bold B28 - Main Gearwheel
11	Bold B28 - Stud x 6
12	Bold B28 - Gearbox (sump)
13	Bold B28 - Bearing (Pinion)
14	Bold B28 - Stud x 4
15	Bold B28 - Motor Gasket
16	Bold B28 - Oil Seal
17	Bold B28 - Pinion
18	Bold B28 - Motor
19	Bold B28 - Oil Filler Screw
20	Bold B28 - Crosspin
21	Bold B28 - Circlips x 2
22	Bold B28 - Bearing
23	Bold B28 - Oil Drain Screw
24	Bold B28 - Pinion Retaining Screw
25	Bold B28 - Woodruff Key
26	Bold B28 - Water Inlet complete
27	Bold B28 - Abrasive Peeling Plate
28	Bold B28 - Abrasive Drum Liner
29	Bold B28 - Top Rubber Seal (drum)
30	Bold B28 - Main Body
31	Bold B28 - Pedestal (Various Heights)
32	Bold B28 - Lid Knob
33	Bold B28 - Splash Cover Seal
34	Bold B28 - Splash Cover
35	Bold B28 - Lifting Hooks
36	Bold B28 - Loading Hopper
37	Bold B28 - Plate Boss Screw
38	Bold B28 - Plate Centre Boss
39	Bold B28 - Plate Boss Nut
40	Bold B28 - Plate Brush Retaining Screw
41	Bold B28 - Plate Brush Retaining Nut
42	Bold B28 - Nylon Brush

43	Bold B28 - Liner Retaining Nut and Bolt
44	Bold B28 - Door Spindle
45	Bold B28 - Spindle Retaining Nut
46	Bold B28 - Door Cam Retaining Nut
47	Bold B28 - Door Cam
48	Bold B28 - Door Cam Retaining Screw
49	Bold B28 - Door Frame
50	Bold B28 - Door Gasket
51	Bold B28 - Alloy Door Back
52	Bold B28 - S/S Door
53	Bold B28 - Handle Retaining Nut
54	Bold B28 - Handle Retaining Screw
55	Bold B28 - S/S Door Handle
56	Bold B28 - Roller Retaining Screw
57	Bold B28 - Nylon Door Roller
58	Bold B28 - Alloy Door Back Retaining Screw
59	Bold B28 - Pedestal Retaining Screw and Washer